# **ALLOY**LED<sup>•</sup> Specifications

### SlimDim <sup>™</sup> Wireless Dimmer

Single Color Dimmer



SlimDim Wireless Dimmers are a revolution in lighting control. Using long range RF technology, these dimmers avoid the need for connecting directly to a power supply, cutting down on cost and installation time. SlimDims are simple and quick to install.

- Mount anywhere: on a wall or in an outlet
- Fob controller detaches for mobile, hand-held control
- Dimming and on/off control for PrimaLine® white tape: pair with the Single Color Receiver (AL-70-01-0002)
- Dimmers and receivers are sold separately


Note: Metal boxes and other barriers between the receiver and remote may decrease signal.

### TECHNICAL INFORMATION

Item #	Description	<ul> <li>Controller Dimensions: 2.6 x 1.3 x 0.35</li> <li>Battery Type: CR2032</li> <li>RF Freq.: 868/915/434MHz</li> <li>Max. Receivers: 8</li> </ul>		
AL-70-01-0001	SlimDim Single Color Dimmer			
AL-70-01-0002	Single Channel Receiver (sold separately)			
AL-98-07-9950-FPLATE	Dimmer Wall Plate - White (sold separately)	<ul><li>1 zone, 0 scenes</li><li>Max. Range: 98 ft. unobstructed</li></ul>		
		<ul> <li>Mounting bracket is magnetic</li> </ul>		


- Batteries, remote, manual, screws and mounting bracket are included
- Wall plate not included

#### DIMENSIONS

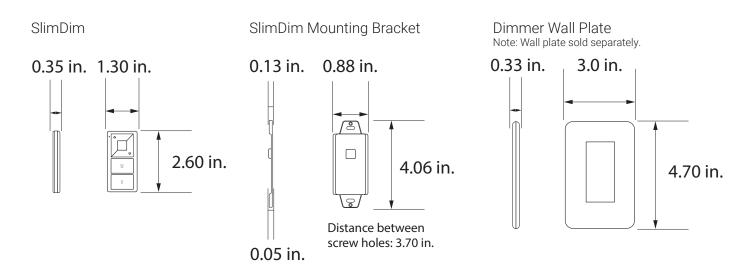

## **ALLOY**LED<sup>°</sup> Specifications

### WIRING DIAGRAM

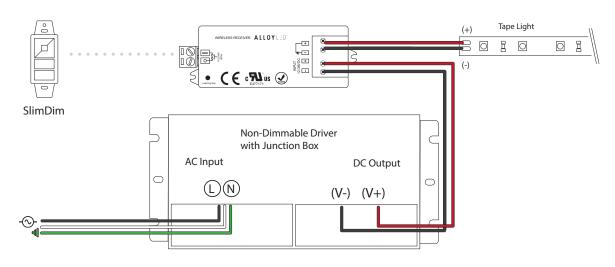


### **OPERATION INSTRUCTIONS**

How to Pair the SlimDim Single Color Dimmer with the Single Channel Receiver (AL-70-01-0002)

- 1. Connect the receiver according to the diagram below.
- 2. Open the battery compartment and remove the plastic tab next to the battery.
- 3. Turn on the wireless dimmer. The power indicator will light up.
- 4. Short press the "Learning Key" button on the receiver for one second or less.
- 5. Touch the up or down buttons on the dimmer.
- 6. The remote control indicator light will blink to confirm pairing.

How to Unpair the Receiver and Controller

1. Hold down the "Learning Key" button on the receiver for about 5 seconds. When the LED lights flash, the controller has been unpaired.

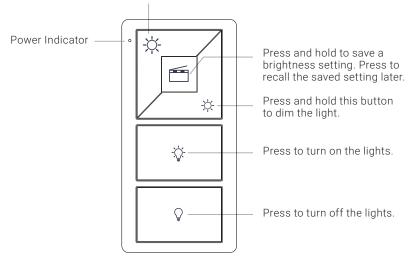




# **ALLOY**LED<sup>•</sup> Specifications

### ACCESSORIES (SOLD SEPARATELY)

#### Single Channel Wireless Receiver

Pair with the Remote Control Dimmer Switch or the SlimDim Wireless Dimmer to dim PrimaLine tape lights.

AL-70-01-0002 Single Channel Wireless Receiver

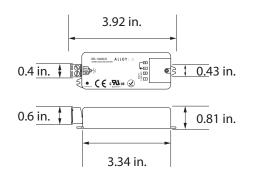

#### Alloy LED PowerFactor™ Non-Dimmable Power Supplies w/ UL Listed Junction Box



ltem #	Output Voltage	Wattage	Wet Location	Dimensions (junction box) (L x W x H)	Class 2
AL-98-12-24030	24V DC	30W	Y (IP66)	6.5 x 3.72 x 1.02 in.	Y
AL-98-12-24060	24V DC	60W	Y (IP66)	7.4 x 3.72 x 1.02 in.	Y
AL-98-12-24080	24V DC	80W	Y (IP66)	8.66 x 3.72 x 1.57 in.	Y
AL-98-12-24096	24V DC	96W	Y (IP66)	8.66 x 3.72 x 1.57 in.	Y
AL-98-12- 24192-MT	24V DC	192W (2*96W)	Y (IP66)	10.94 x 4.33 x 1.77 in.	Y
AL-98-12- 24288-MT	24V DC	288W (3*96W)	Y (IP66)	11.85 x 4.33 x 1.77 in.	Y

Note: Alloy LED strongly recommends using Listed Class 2 power supplies for all installations. Always install in accordance with local and national electrical code regulations.