



Casambi® Compatible Wireless Single and Dual Rocker Dimmer Wall Switch


INSTRUCTIONS

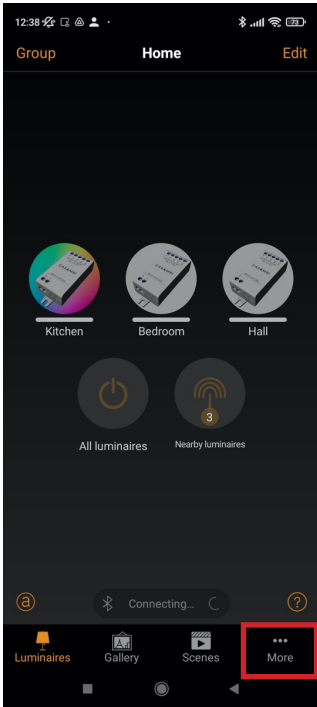


1) On the Network's main page, select "More"

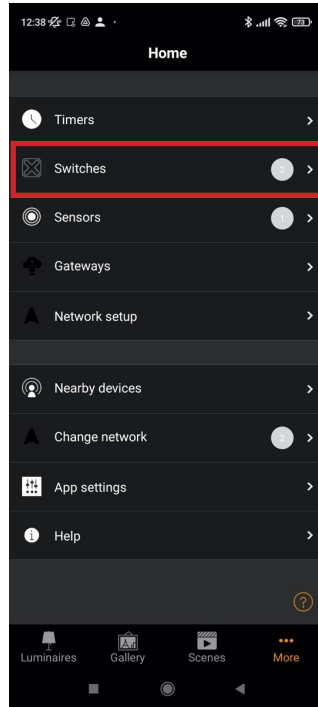


2) Select "Switches"

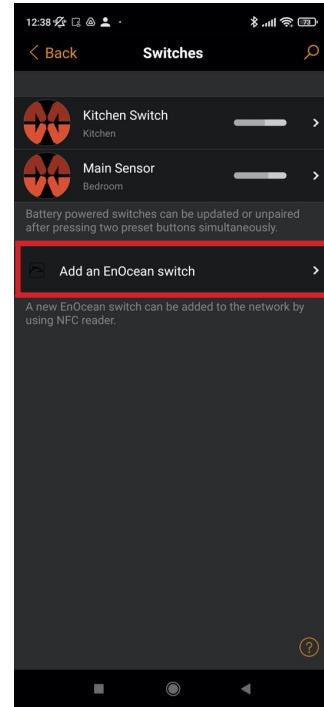


3) Select "Add an EnOcean switch"

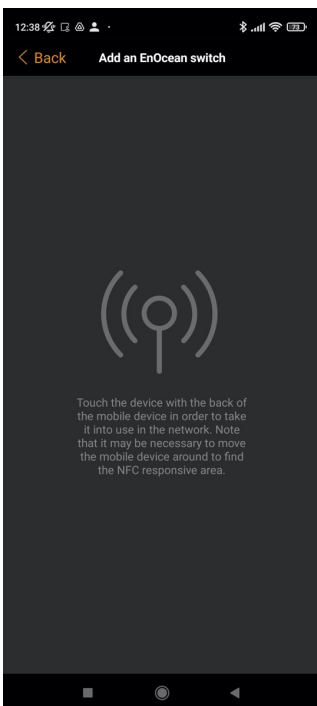

4) Follow the on-screen instructions and add your EnOcean switch

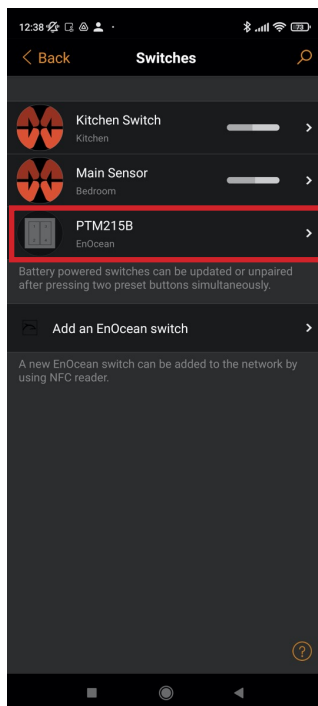


5) Select the dimmer switch to start the configuration

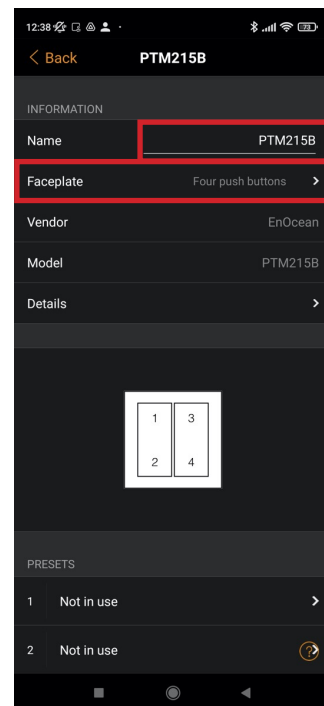


6) Rename it to a name of your choice and select "Faceplate"

INSTRUCTIONS (CONTINUED)

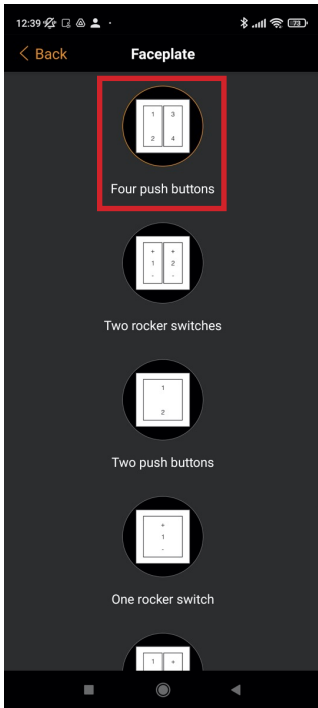


7) Look for the correct array for your switch and select it

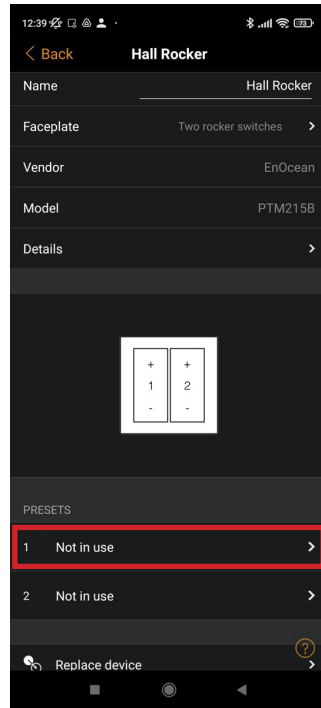


8) Select the Rocker/Button to configure



9) Select "Not in use" to change what the button does

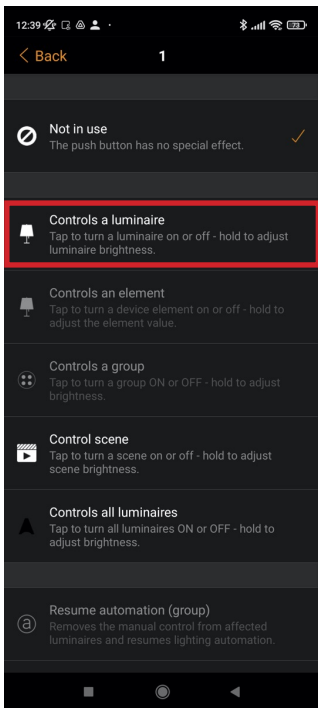

10) Select "Controls a luminaire"

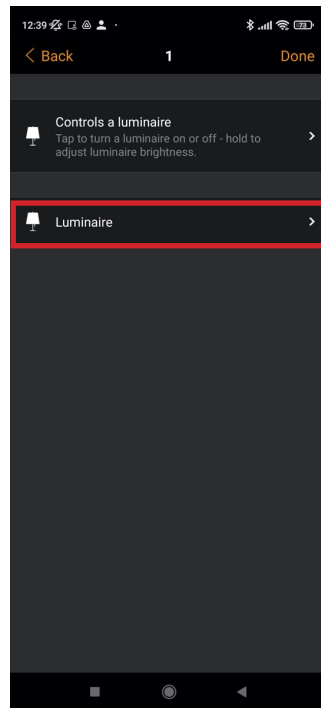


11) Select "Luminaire" to select which luminaire(s) to control




12) Select the luminaire(s) to control and select "Done"

INSTRUCTIONS (CONTINUED)

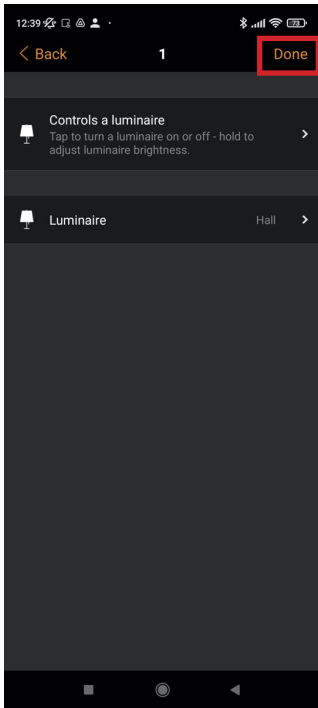

13) Select "Done" to save the configurations

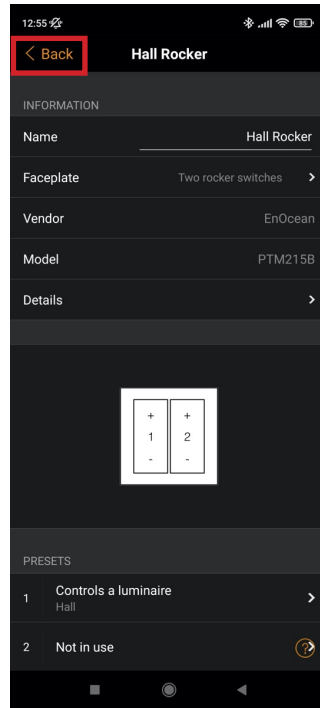

14) Select "Back" to finish